

Wireless Barcode Scanner User's Manual



Introduction

Wireless barcode scanner transfer the scanned data to receiver wirelessly ,then the receiver transfer data to computer terminal, the scanner is powered by the inserted lithium battery, please charge battery in time if low power.

It is recommended to fully charge the battery on first use. The receiver and scanner have been paired already in default. If you want to re-pair, just scan the pair code on receiver. If the pair code is missing, refer to the 1.8 pairing method.

The setting is divided into scanner part and receiver part. You can restore all settings to factory default with below steps:set scanner to default→ pairing scanner with receiver (ignoring this step if paired)→set receiver to default.

“ * ” default setting.

Part one : Scanner Setting

1. Set scanner to default



2. Working mode



Immediate

(The scanned data will be not stored in scanner ,it will be directly transferred to receiver. There will be LED flashing and beeper as reminder if transferring failed.)



*Auto

(The scanned data will be stored in scanner when no signal. Data will be transferred to receiver when signal recover.)



Inventory Input

(The scanned data will be stored in scanner and not transferred to receiver.)



Inventory Output

(All data stored in scanner will be transferred to receiver and the scanner automatically enter the inventory input mode after data is fully transferred.)

3. Engine sleep



10S



*1Min



5Min



10Min



None

4. Scanner sleep



10S



*1Min



5Min



10Min



30Min

5. Transmission fail sound



OFF



*ON

6. Startup sound



OFF



*ON

7. Beeper



OFF



Short sound



*Middle sound



Long sound



Low frequency



*Medium frequency



High frequency

8. Auto pairing



Note: Scan the barcode, the device will enter into the one minute auto pairing mode (LED flash, beeper sound), re-plug in the receiver, the scanner will be paired successfully. Scan the barcode again if you want to exit the auto pairing mode.

9. Scanner version



10. Clean the stored data



Note: Scan the barcodes and the stored data will be cleaned.

Part two : Receiver Setting

1. Set receiver to default



2. Interface selection



*USB-HID



RS232



USB-VCP



KB

3. Keyboard language



*USA



French

	German		*8 bit		*Middle sound		Upper case compulsive
	UK		*None		Long sound		Lower case compulsive
	Turkey-Q		Even		Low frequency		Upper and Lower case convert compulsive
	Danish		Odd		*Medium frequency		*OFF
	Janan		7. Stop bits		High frequency		ON
	Spanish		*1 bit		11. Startup sound		15. Num lock
	Italian		2 bit		OFF		*OFF
	Universal		8. NAK		*ON		ON
	4. Baud rate		*ACK/NAK OFF		12. Terminator		16. Inter-character delay
	4800		ACK/NAK ON		None		*None
	*9600		9. CTS/RTS		*Enter (0x0D)		10ms
	19200		*CTS/RTS OFF		Return (0x0A)		20ms
	115200		CTS/RTS ON		Tab (0x0D+0x0A)		50ms
	5. Data bits		10. Beeper tone		Space (0x20)		200ms
	7 bit		Sound OFF		13. Caps lock		17. Receiver version
			Short sound		*None		*None