

MP168 Screen Barcode Image Platform Quick Guide

Note

- ☞ A standard packing includes a platform and a CD (or a user manual).
- ☞ Use a piece of dry and soft cloth when cleaning the platform is in need.

Installing the cable


- 1) Switch off the host;
- 2) Refer to the below pictures, connect the host with the platform based on different cables;
- 3) Ensure that all connections are secure.
- 4) Switch on the host system. If the installation is successful, the beeper will beep.



RS232



USB

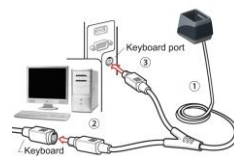

PS/2

Programming instruction and example

Two programming modes have been provided as follows:

➤ Single-scan setting


Scan the appropriate

Single-scan setting



Example: To set Flow control to be XON/XOFF.

➤ Multiple-scan setting

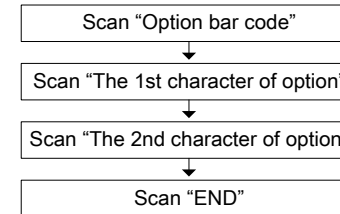

Example: To set Flow control to be XON/XOFF.

Return default parameters and version information



Default value initialization



Firmware version list

Voice broadcast function

Note: The factory default settings are indicated with asterisks (*).



%9201D00%

Disable



%9201D01%

Enable*